


OBLIGHT USER MANUAL

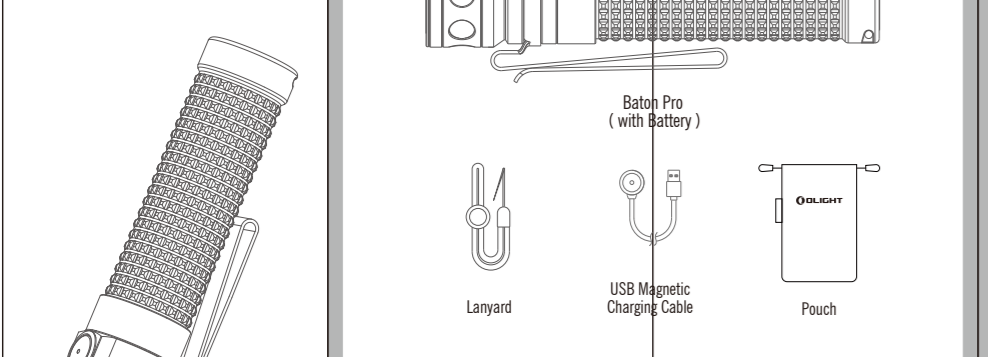

SPECIFICATIONS	
TURBO 2000lm	120m
HIGH 600lm	120m
MEDIUM 120lm	120m
MOON 60lm	120m

CHARGING	
TURBO	1.5m
HIGH	1.5m
MEDIUM	1.5m
LOW	1.5m

* All performance measurements in accordance with ANSI/NEMA FLI-2009 standards. The tests are performed using the battery included in the flashlight.

Baton Pro

Thank you for purchasing this Olight Product. Before use, please read the manual carefully!

NÄPPÄLÄNKU.

Valaisimen ollessa sammutettuna, päätäksytään ollessa sammutettuna, päätäksytään ollessa sammutettuna (n. 2 sekuntia), valaisin käynn. moonlight-tilassa jonka jälkeen valo sammuu. Valon sammussa valaisin siirtyy sinun näppäinliikkeen avulla. Näppäinliikkeen poisto onnistuu pitämällä lykintä pitkään painettuna, valaisin siirtyy moonlight-tilaan, jonka jälkeen valaisimen näppäinliikkeen avulla.

(NO) Norwegian

HOWARD BRUKELYAN

PÅ/AV.

Trykk en gang på sidebryteren for å slå lysen på/av. Når lyset slås på, får det den samme lysstyrken som det ble slått av. (Kun nattlys, lav, medium og høymodus lages når lyset er slått av. Turbo-modus ikke lages som høymodus. Strobomodus kan ikke lages).

(SV) Swedish

ANVÄNING

AKTIVER OG DEAKTIVER TURBOMODUS.

Et raskt dobbeltklikk på sidebryteren vil aktivere Turbo og et raskt dobbeltklikk igjen vil deaktivere Turbo. Når den memorerste modusen er på høy, vil et raskt dobbeltklikk på sidebryteren deaktivere Turbo og bytte til medium. Når den memorerste modusen er Medium, Lav eller Moonlight, vil et enkelt dobbeltklikk på sidebryteren deaktivere Turbo og et enkelt trykk eller hold inne bryteren.

MOONLIGHT-NIVÅ.

Når lyemklytten er av, trykk og hold sidebryteren i over et sekund for å få tilgang til moonlight. Swift lagret modus er moonlight, klakk en gang på sidebryter for å aktivere.

STROBE.

Raskt trippelklikk på sidebryteren aktivere strobe. Avsluttet ved et enkelt trykk eller hold inne bryteren.

TIDISUR.

Baton Pro har en lang (9 minutter) og kort (3 minutter) nedligning for å slå lys på/slå av automatisk. Når lyemklytten er slått på, hold inne sidebryteren under gjeldende lysstyrke for å få tilgang til timerinstillingene. Et enkelt klikk aktivere kort nedligning og/og blink aktivere lang nedligning. Lyemklytten slår seg av automatisk når tiden er tatt ned. Når lyset er slått inn, hold inne sidebryteren i 3 andre timerinstillingen. Når tiden er tatt ned og brukeren går inn i timerinstillingene igjen, vil lyset settes til sist brukte timerinstillingen.

VERGRENDELEN/ONTGRENDELEN.

Als de zampke is utgeschaltet, houdt u de zischakaler even tot de knop lockout mod. De zampke als de maanlicht stand branden en vervolgens uit schakelen naar de lockout stand. In de vergrendelde stand, wanneer u de schakaler voor minder dan een seconde indruk, zal het rode lampje onder de schakaler even oplichten om de vergrendelde functie aan te geven. Om te ontgrendelen, houdt u de schakaler voor meer dan een seconde indruk tot de maanlicht stand. Wanneer de zampke is uitgeschaltet, houdt u de zischakaler een seconde vast in de UIF-stand om de zampke direct aan te zetten in de laagste lichtsterkte.

BEIDIENEN DER TASCHENLAMPE

Ein/Aus: Einzelklick auf den seitlichen Schalter. Licht, stellt es sich auf schalt den Ausschaltstand in die vergrendelte stand, wenn Sie mit einem Doppelklick auf den seitlichen Schalter drücken und dann den Schalter auf dem aktuellen Helligkeitspegel halten. Ein einmaliges Klicken öffnet den Kurzzeit-Timer, ein doppeltes Klicken öffnet den Langzeit-Timer. Die Taschenlampe schaltet sich automatisch bei einem abgeblendeten Stand aus. Nach dem Einstellen des Timers, wechseln Sie den Timer-Einstellungen mit einem doppelten Klick und Halten des seitlichen Schalters. Wenn der Timer abgelaufen ist und der Benutzer den Timer wieder einstellen möchte, geht das Licht auf die letzte Timer-Einstellung zurück.

SPERREN/AUFSCHLIESSEN.

Wenn die Lampe ausgeschaltet ist, drücken und halten Sie den Schalter für einige Sekunden. Der Modus/Memory wird kurz aktiviert, im Anschluss schaltet sich die Lampe wieder aus und die Transportsicherung (Lockout-Modus) ist aktiviert. Das heißt, die Lampe reagiert nicht mehr auf einen normalen Druck des Seitenschalters und ist damit gegen unbeabsichtigtes Einschalten, z.B. beim Transport oder im Rucksack, geschützt. Beim Bedienen des Schalters wird eine aktive Transportsicherung durch eine rote Indikatorlampe signalisiert. Zum Deaktivieren der Transportsicherung, drücken und halten Sie den Seitenschalter für ca. drei Sekunden.

WARRANTY

Within 30 days of purchase. Contact the original seller for repair or replacement. Within 5 years of purchase. Contact Olight for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

3.0329.6010.9003 C. 05. 06. 2020

CONTENTS

(EN) English	01
(CHS) 简体中文	02
(F) Finnish	02
(NO) Norwegian	04
(SV) Swedish	05
(NED) Nederland	07
(PL) Polska	08
(DE) Deutsch	10
(HU)Magyarország	12
(RU) Русский	13
(ES) Español	15
(RO) Romanesc	17
(JP) 日本語	18
(FR) Français	20
(BG) България	22
(IT) Italia	24

3.0329.6010.9003 C. 05. 06. 2020

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

OPERATION

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHARGING

GREEN: Charging Completed
RED: Charging

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light. * Before first use please fully charge the product.

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

BEFORE FIRST USE

Remove the insulating film
Unscrew
MCC1A

3.0329.6010.9003 C. 05. 06. 2020

THANK YOU!