OLIGHT USER MANUAL

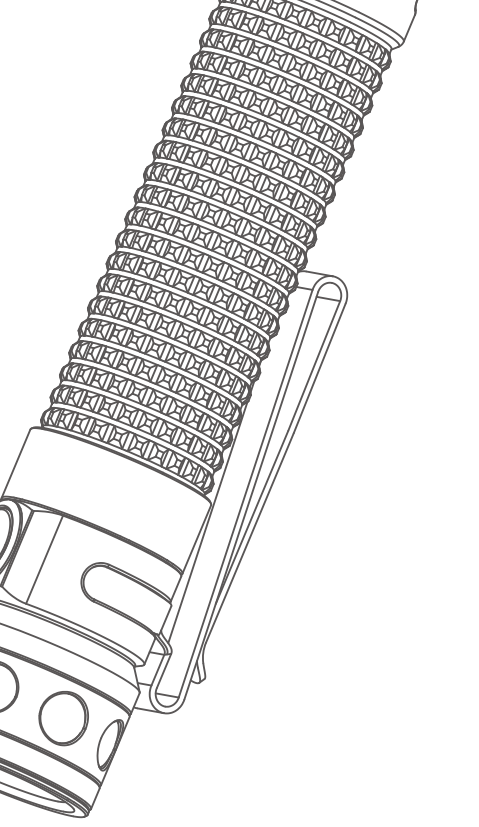

Baton Pro

Thank you for purchasing this Olight Product. Before use, please read the manual carefully!

IN THE BOX

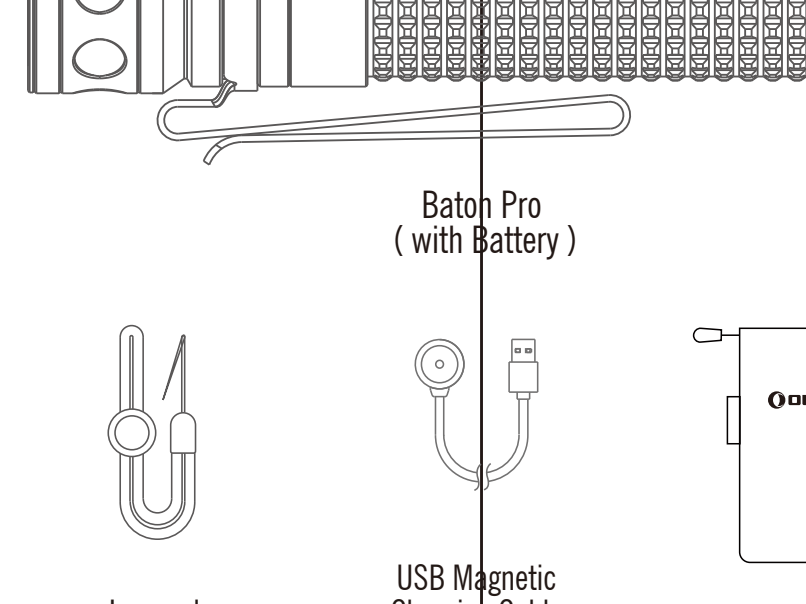

SPECIFICATIONS

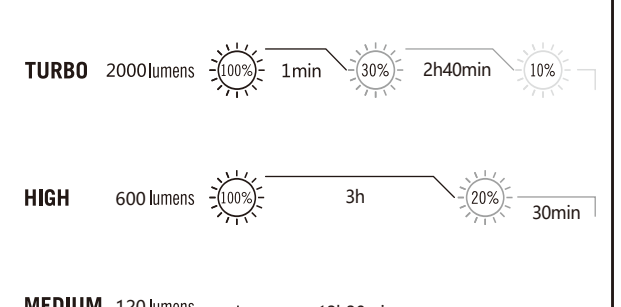

	TURBO	HIGH	MEDIUM	LOW
	132m	70m	30m	15m

4,350cd	1.5m	IPX8

(L)4.25 x (D)0.98in (L)108 x (D)25mm	107g / 3.77oz (Including Battery)

All performance measurements in accordance with ANSI/NEMA FL1-2009 standards.The tests are performed using the battery included in the flashlight.

SUPPORTED BATTERIES

* The flashlight is equipped with a customized 18650 rechargeable battery. In case of emergency, 2 x CR123A batteries or other brand's 18650 battery with built-in protection board can be used (but charging and advertised outputs are not supported).

PRODUCT OVERVIEW

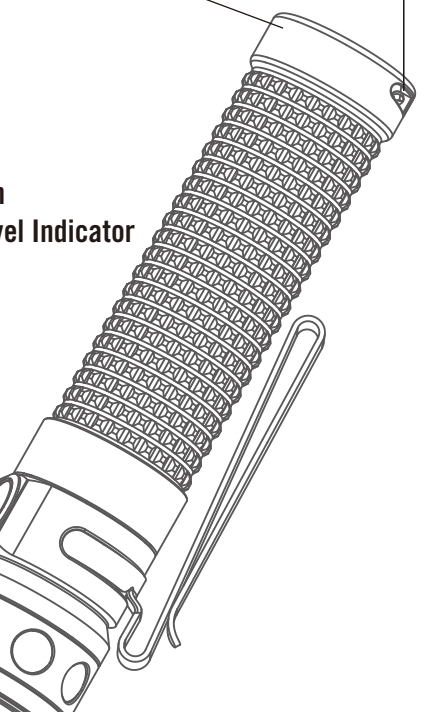

BEFORE FIRST USE

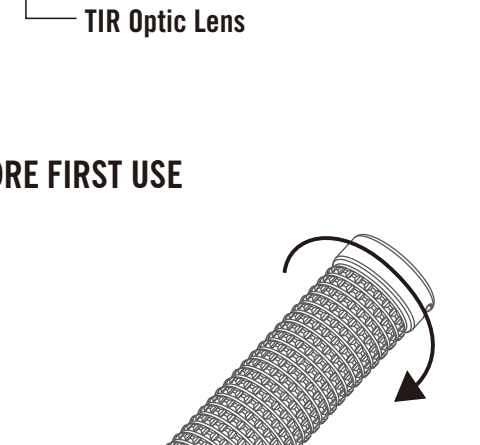

BATTERY LEVEL INDICATOR

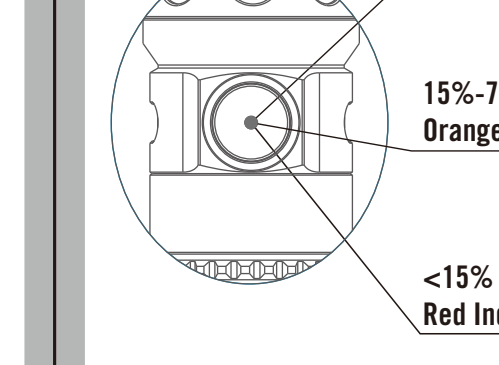

NOTE: Under moonlight, when the battery power is more than 15%, the indicator won't turn on; when the battery power is less than 15%, the indicator will light up red .

CHARGING

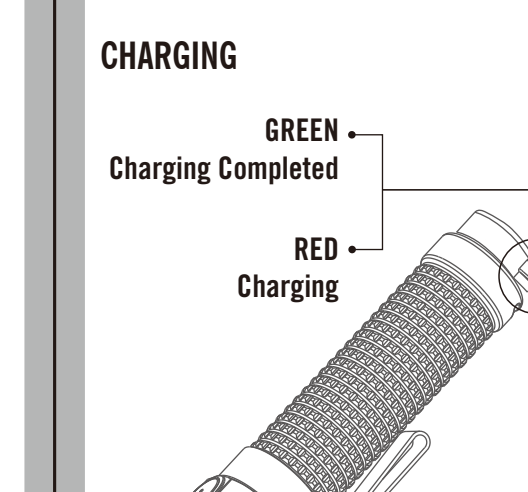

* Connect the magnetic USB end of the charging cable (MCC1A) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 4.5 hours to fully charge the light.
* Before first use please fully charge the product.

CONTENTS

(EN) English _ _ _ _ 01
(CHS) 简体中文 _ _ _ _ 02
(FI) Finnish _ _ _ _ 02
(NO) Norwegian _ _ _ _ 04
(SV) Swedish _ _ _ _ 05
(NED) Nederland _ _ _ _ 07
(PL) Polska _ _ _ _ 08
(DE) Deutsch _ _ _ _ 10
(HU)Magyarország _ _ _ _ 12
(RU) Русский _ _ _ _ 13
(ES) Español _ _ _ _ 15
(RO) Romanesc _ _ _ _ 17
(JP) 日本語 _ _ _ _ 18
(FR) Français _ _ _ _ 20
(BG) български _ _ _ _ 22
(IT) Italia _ _ _ _ 24

(EN) English

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, high, and low modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode: quickly double click the side switch to enter Turbo mode, and quickly double-click the side switch again to exit Turbo mode.When the memorized mode is on high, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double click the side switch to exit turbo mode and switch to the previously memorized mode.

STROBE: When the flashlight is on, triple-click the side switch to activate strobe mode. To quit this mode, single click or press and hold the switch.

TIMER: The Baton Pro has a long (9 minutes) and short (3 minutes) timer when the light needs to be automatically turned off. When the flashlight is on, double click and hold the side switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click and hold the side switch to shift the timer settings. When the timer is up and the user is about to enter the timer again, the light will return to the last timer setting.

LOCKOUT/UNLOCK: When the flashlight is off, press and hold the side switch (for about 2 seconds) to access the button lockout mode (the flashlight will enter the moonlight mode first and will then switch off to signal the lockout mode). Under the lockout mode, press and hold the switch for less than one second without releasing it. The red indicator below the switch will be on for a short time to signal that the light is still in a lockout mode. To unlock it, keep holding switch for over one second until the moonlight mode is on again.

(CHS) 简体中文

操作

开/关机：单按按键开、关机。开机时，手电点亮在记忆存储的亮度。(月光、低、中、高亮档在关机时记忆，Turbo记忆为高，Strobe不记忆)。

改变亮度：长按按键改变亮度，输出从当前亮度开始，按月光->低->中->高->低 顺序改变，释放按键选定亮度。

开启月光：关机状态下按住按键1秒以上，月光开启，如前次关机为月光，单按按键。

Turbo与返回：快速双按按键进入Turbo，再次双按返回，如记忆档为高亮档或中亮档，输出中亮档。如记忆档为低亮或月光，输出记忆档位。

开启爆闪：快速连按按键三次或以上进入爆闪，单按或长按操作退出爆闪。

定时关机：手电可设置两种指定的点亮时间：长定时（9分钟）与短定时（3分钟）。开机后，在当前亮度下，双按按键并保持,输出闪一次为短定时，闪两次为长定时，计时结束自动关机。在计时过程快速双按按键并保持转换定时设置。第一次定时结束后，再次进入定时设置，使用前次定时时长。

锁键与解锁： 关机状态下，按住按键（约2秒）直至见到月光熄灭，手电进入锁键状态。对于非解锁操作，按键底部红色指示灯短时间亮起提示。按住按键（约1秒）直至手电亮起月光，手电自动解锁。

(FI) Finnish

DANGER

- Do NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- Do NOT cover the light head when the flashlight is on, or place the flashlight head on the ground. The radiation energy of the flashlight may cause damage to the flashlight itself, or even result in burning to flammable objects.
- Do not separate the battery from the flashlight. The included rechargeable battery has extremely strong discharge power. For example, the external conductor short circuit battery may lead to overheat, combustion, or even cause unexpected disasters.
- The battery can only be charged while installed in the flashlight. When charging, please use the provided charger for your light or a compatible Olight charger.

WARNING

- Keep out of reach of children.
- When the flashlight is working on the Turbo mode, the surface temperature can reach 50°C. Please switch off the flashlight temporarily or turn it to low mode.
- If the light is about to be put aside for a long time or be transported, please unscrew the boby for half a circle to cut off the circuit.
- Do not use the turbo mode continuously when the environmental temperature is high in case the flashlight body is too hot to hold.
- Ensure the battery is inserted with the negative (-) end pointing to the head of the flashlight (LED side).
- Store the battery with care; if the battery needs to be changed, please take good care of the battery taken out. Do not mix it with the conductive metals.

NOTICE

- When the flashlight is turned off, the current mode will be memorized. The modes that can be memorized are: moonlight, low, medium, and high mode (after the light is turned off, high mode will be memorized for 10 minutes before reverting to medium mode). If the light is turned off on turbo mode, the high mode will be memorized instead and will also revert to medium mode after 10 minutes, turbo mode can not be memorized.
- Turbo mode will stay on for 2 minute and then step down to high mode within a minute.
- Moonlight and turbo mode are not the normal brightness levels (low, medium, and high mode). Under moonlight and turbo mode, press and hold the switch to enter the normal brightness level cycle.

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery Warranty: Olight offers a one year warranty for all rechargeable batteries.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

EU-DECLARATION OF CONFORMITY

EU-Declaration of Conformity can be found here CE: https://olightworld.com/ec-declaration

USA Customer Support

cs@olightstore.com

Global Customer Support

Customer-service@olight-world.com

Visit **www.olightworld.com** to see our complete product line of portable illumination tools.

Dongguan Olight E-Commerce Technology Co., Ltd

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China

3.0329.6010.9003 **C. 05. 06. 2020**

THANK YOU!